

At K&M we have tried to make installing our Conductor Heads easy for you by including an optional installation cleat. This cleat slips into the hem of the backplate of the conductor head. To install the cleat you will need a level and 2 appropriate fasteners for your wall.


For wood siding we recommend a #10 x 2" stainless steel screw.



For brick or concrete walls use lead wedge hammer drive anchors 1/4" x 1 1/2" long



Use a level to install cleat to wall at the desired height and position of the conductor head. Once cleat is secured to wall just drop conductor head into position so that the hem slides over the cleat. We recommend you seal the top with silicone to prevent water from getting behind the conductor head.

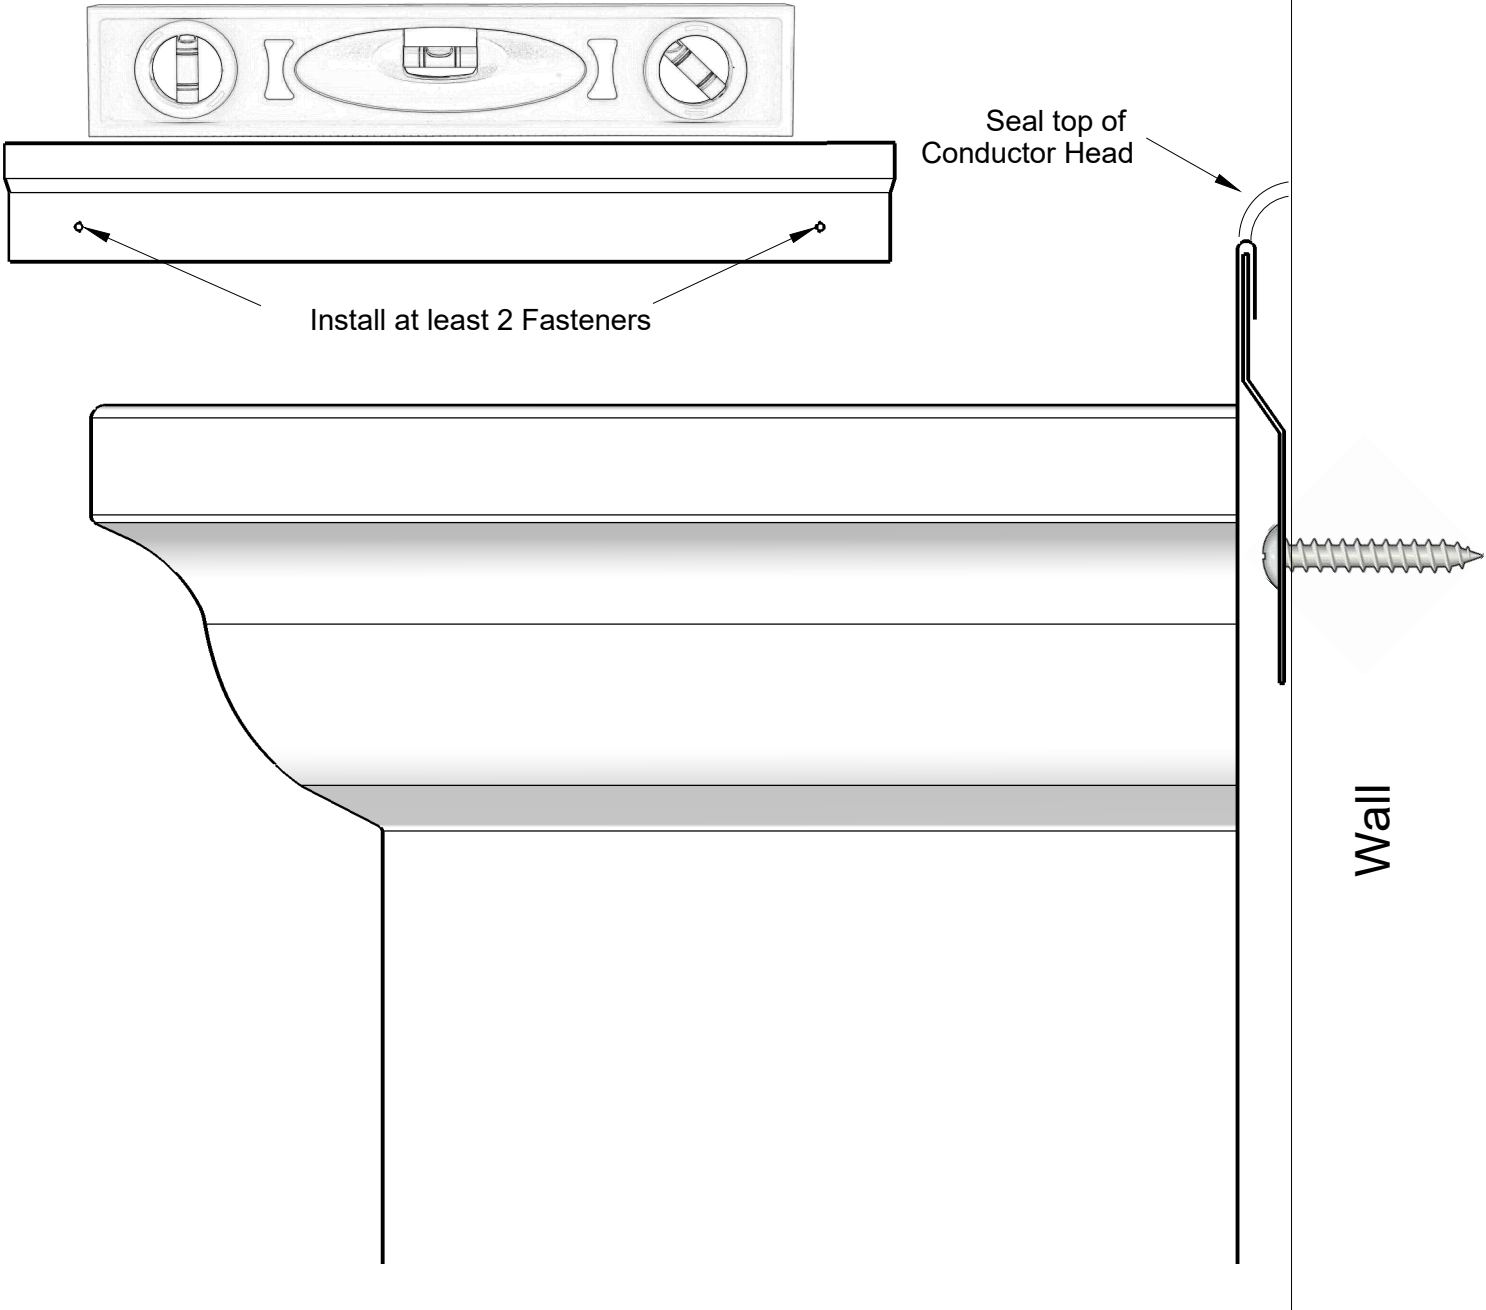

1310 E. Cornwallis Rd.
Durham, NC 27713
P-(919) 544-8887 F- 544-8898
info@kmsheetmetal.com - www.kmsheetmetal.com

Conductor Head Installation Cleat

REVISIONS		
MM/DD/YY	REMARKS	
1	..ORIGINAL DRAFT OF DRAWING	
2	..	
3	..	
4	..	
5	..	

D 001